
NORTH ARROWS

ORIENTATION:

ORIENT ALL PLAN VIEWS SO THAT NORTH WILL BE TOWARD THE TOP OF THE SHEET WHEN PRACTICAL OR TOWARD THE LEFT OF THE SHEET IF TOP ORIENTATION IS IMPRACTICAL.

PLACE THE NORTH ARROW AT THE TOP AND TO THE RIGHT SIDE OF PLAN VIEW IF POSSIBLE.

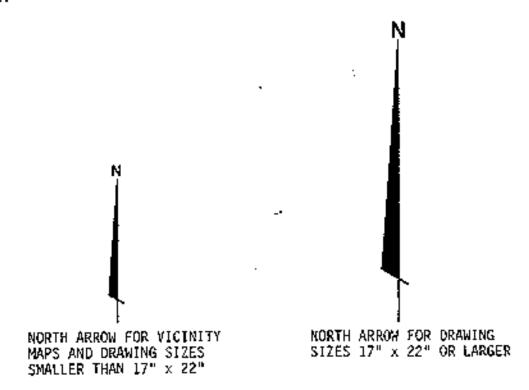

DECLINATION OF NORTH AS REQUIRED FOR SPECIAL USE:

